

Bulkhead Jack—For Semi-Rigid Cable

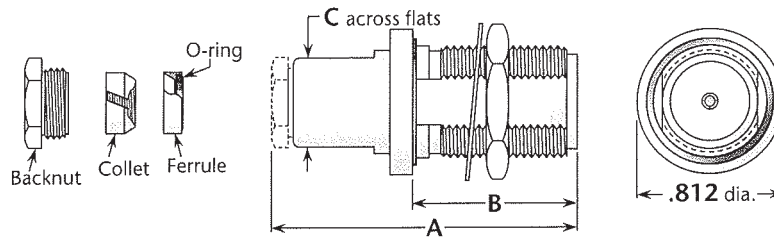


Figure 1
(Collet clamp [solderless] cable attachment, captive contact in body)

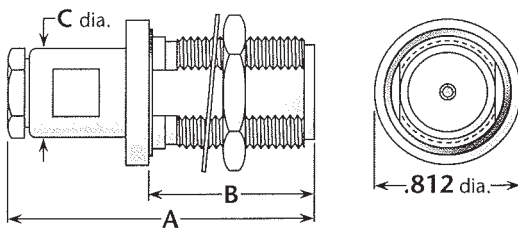


Figure 2
(Solder-clamp; gold-plated ferrule, nickel-plated body)


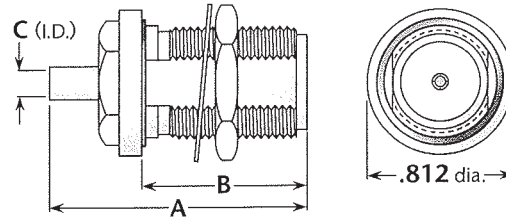


Figure 3
(Direct solder)

Delta One-Step Cable Attachment for Semi-Rigid Cable

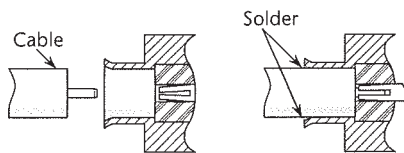

Delta "One-Step" connectors feature captivated contacts and insulators to allow rapid, easy assembly to semi-rigid cable—simply trim the cable jacket and dielectric flush, chamfer the center conductor, insert into the connector, and solder the jacket to the connector body.

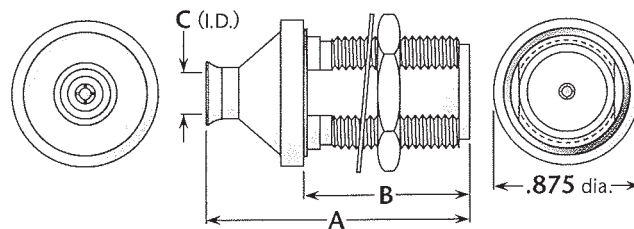


Figure 4
(One-Step cable attachment)

Cable Group	Fig.	Dimensions			Mounting Figure	Max. Panel	Plating		Delta P/N	Assembly Procedure/Trim Code
		A	B	C			Body	Contact		
12	1	1.55	.889	.50	72	.25	Nickel	Gold (C)	1116-163-N721	***
13	2	1.67	.922	.50	72	.25	Nickel	Gold	1116-031-N720	F/04
13	3	1.33	.884	.145	72	.25	Nickel	Gold	1116-031-N723-1	***
13	4	1.38	.922	.143	72	.25	Silver	Gold (C)	1116-031-A723-3	I/01
14	2	1.67	.922	.50	72	.25	Nickel	Gold	1116-025-N723	F/04
14	3	1.33	.884	.090	72	.25	Nickel	Gold	1116-025-N723-1	***
14	4	1.38	.922	.088	72	.25	Silver	Gold (C)	1116-025-A723-2	I/01

See page 204 for cable groups. • Assembly procedures start on page 205.

*** Contact factory for cable assembly instructions. • See page 203 for mounting dimensions.

(C) in contact plating column indicates captive contact. • See page 6 for alternate body plating information.